Congratulations

You are the proud new manager of the Virtual Footix. Like a real soccer player, the manager should train him, feed him with the right amount of food and most important giving him your tender loving care. Virtual Footix is born to be a World Cup Champion. So if you give him all the right attention, he would in return win the World Cup championship for you and you alone.

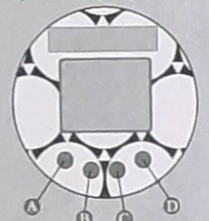

4 Basic Keys for General Operation

A key: Cancel key
B key: Left cursor key
C key: Right cursor key
D key: Enter key

Before game starts, waits about 30 sec to begin play and then set clock.

Set the Clock:

Press D key to clock mode.
Press D key and A key at the same time to enter setting mode.
Press C key to set the hours.
Press B key to set the minutes.
Press D key to return to game mode.

Icon Descriptions

Sleeping

Turn off the light while your Footix is sleeping. Footix will dream of the World Cup if you do so.Otherwise he will have nightmares and will not get enough resting time.

Feeding

Press B or C key to select type of food to feed. Press D key to confirm function

Cleaning

After every training, you should give Footix a thorough cleaning. otherwise he will be sick.

Training

Training Footix is the most important event to keep him fit. Different training exercises should be given to baby, young and mature Footix. Make sure you use well with the left and right key at each stage and timing is the clue.

Medical Treatment

If Footix is over stressed, too full or too hungry, not having enough resting time or even too dirty, he will be sick. A sick indicator will be shown in every 30 sec. You should take him to the hospital for medical treatment.

Karaoke

This entertainment mode is also very important. you should give Footix some relaxation after all the tough training. Follow the tone after Footix sings. Key A-do, Key B-me, Key C-so, Key D-do.

Health Index

Select Health index to review your Footix's health situation.
You may review the following information.

* Weight - You should keep Footix's weight in its ideal range i.e the middle range (not too high and not too low). If you see the bar sparkling at the low or high end, it is your duty to ajust it to the ideal range again by give him the right amount of food.
* Fitness - You should keep Footix's fitness in its ideal range i.e the middle range. If you give Footix enough training and also provide him some entertainment like Karaoke or a glass of nice fruit juice, it will grow up to be a fit, healthy and happy Footix.

World Cup

This icon will only activate in the mature stage. It is now your mission to make Footix to become the World Cup champion. First of all, you have to input your name before the game starts. Now you are in the quarter final of the World Cup. When the match starts, you should press the Enter key to make Footix run fast to catch the ball. Once he has the ball on his foot then he has to decide which way to kick towards the goal by pressing the left or right key. If Footix loses in one match, he will be suspended for the next day's match. He could play the World Cup again the day after the suspension. If Footix wins, he will be entitle to play in the semi final and then the final.

Virtual voice alert and communication

Footix will let you know that he needs something by saying "hello" to you or he will whistle when he is very happy. You could hear more virtual voices all along.

Sound On and Off

Press A key and D key at the same time in the game mode to turn sound ON or OFF.

How to reset

Press the reset button on the back of the game with a pointed object (don't push too hard) and a new Virtual Footix game will appear.

Inserting the battery

To activate your Virtual Footix, pull the plastic tab from the back of game. Replace battery if the Liquid Crystal Display (LCD) is weak.To insert new battery, **be sure to turn sound off first** (see above). Remove the battery compartment cover at the back of the game. To remove cover, unscrew the cover then pull out the battery. Insert one 3V "CR2032" button cell battery. (Battery included).

Something new!! Now time yourself for a quick recovery

After taking out the battery you should have 30 sec to replace a new battery without affecting the game. This is to say the game should remain at its last playing point so you will not lose out from this important World Cup moment.

Battery Precautions

Rechargeable battery is not recommended. Only battery of the same or equivalent type as recommended is to be used. Battery is to be inserted with the correct polarity. Exhausted battery is to be removed from the toy. The supply terminals are not to be short-circuited. Battery installation should be done by adult. Non rechargeable batteries are not to be recharged.

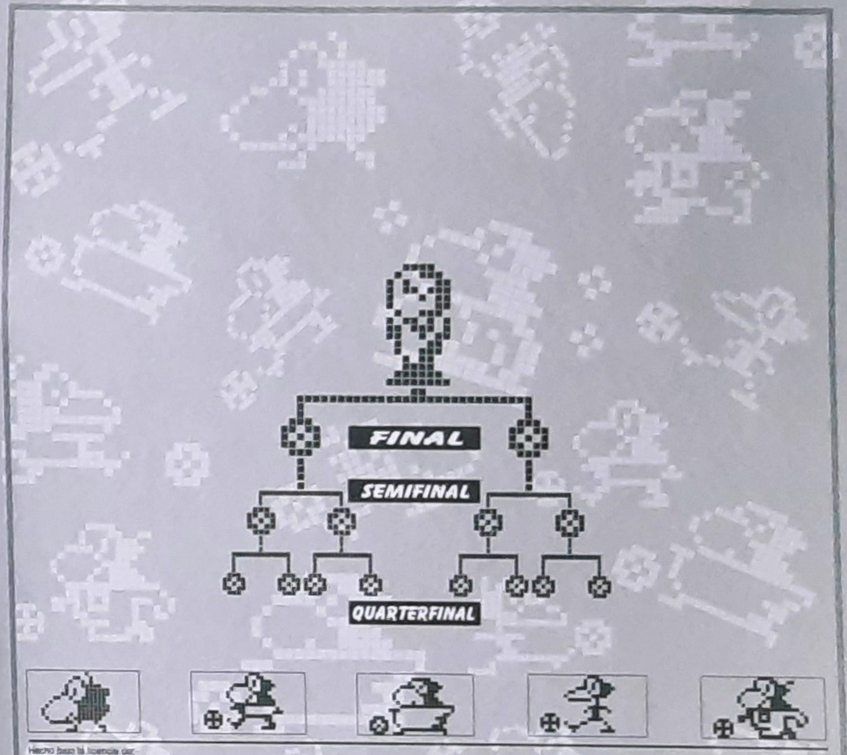

Hecho bajo la licencia de:
Manufactured under license by:
SERA CREATIVE Sera Creative Ltd.

© El Emblema y la Mascota oficial de France 98 son copia y derechos reservados de ISL.
© The France 98 Emblem and Official Mascot are Copyrights and Trademarks of ISL.

F e l i c i d a d e s !

Tú eres el nuevo Director Técnico del Virtual Footix. Al igual que con un jugador de futbol profesional, el Director Técnico es responsable del entrenamiento, alimentación y hasta de su entretenimiento. Virtual Footix nació para ser el campeón de la Copa del Mundo. Si tú le brindas la atención y el cuidado que necesita, él te lo pagará ganando la Copa del Mundo para ti.

BOTON A: Para cancelar.
BOTON B: Para moverse hacia la izquierda.
BOTON C: Para moverse hacia la derecha.
BOTON D: Para iniciar o accesar.

Antes de que el juego comience, espera unos 30 segundos y ajusta el reloj.

Presiona el botón D para accesar la modalidad de reloj.
Presiona el botón D y el A al mismo tiempo para entrar a la modalidad de ajuste de hora.
Presiona el botón C para ajustar las horas.
Presiona el botón B para ajustar los minutos.
Presiona el botón D para regresar a la modalidad de juego.

DESCRIPCION DE LOS ICONOS

Dormir
Recuerda apagar la luz mientras tu Footix esté durmiendo, para que pueda soñar con la Copa del Mundo. Si no apagas la luz, Footix puede tener pesadillas y no descansará bien.

Alimentación
Presiona el botón B o C para seleccionar el tipo de alimento.
Presiona el botón D para confirmar e iniciar la alimentación.

Limpieza
Como todo atleta, Footix debe bañarse después de cada entrenamiento. De lo contrario, se enfermará.

Indicador de Salud
Selecciona el indicador de salud para conocer el estado de salud de Footix. Podrás revisar dos aspectos importantes:
Tú debes mantener el peso de Footix en el rango ideal. Es decir, en el rango central del indicador de barra. Si ves que la barra empieza a destellar en la parte más baja o más alta, debes ajustar la alimentación, ya sea dándole más de comer si está en la parte baja, o dándole menos si está en la parte alta.
Debes de mantener el nivel de salud física de Footix en el rango central del indicador de barra. Si entrenas a Footix lo suficiente y lo entretienes con el Karaoke o le das un vaso de jugo, Footix crecerá sano, fuerte y alegre.

Entrenamiento
Entrenar a Footix es tu prinicipal función como Director Técnico. Debes darle diferentes tipos de ejercicios en las diferentes etapas de tu Footix: bebé (aquí inicia el juego), joven y finalmente a adulto. La clave para tí es estar muy alerta y accionar los botones B y C rápidamente, ya que tu coordinación y agilidad determinarán el éxito del entrenamiento en cada etapa.

Tratamiento Médico
Footix se enfermará si está muy estresado. También se enfermará por comer demasiado o por estar hambriento; por no descansar o por estar sediento. Tú sabrás si Footix está enfermo, ya que aparecerá un inidicador en la pantalla cada 30 segundos. Para remediar esta situación, debes llevar a Footix al hospital para que le proporciones tratamiento médico.

Karaoke
Esta modalidad de entretenimiento para Footix es muy importante. Es necesario que Footix se relaje después de tanto entrenamiento y tú puedes cantar con él, siguiendo su canción con los botones simulando las notas musicales así:
Botón A - do, Botón B - mi, Botón C - so, Botón D - do.

Copa del Mundo
Este icono sólo se activará cuando Footix ya sea adulto. Es tú misión lograr que Footix se convierta en el campeón de la Copa del Mundo.
Primero, tienes que escribir tu nombre antes de que el juego comience. Empezarás en cuartos de final. Cuando emplece el partido, debes presionar el botón D para que Footix corra rapidamente para alcanzar el balón. Una vez que Footix tenga el balón, debes decidir hacia qué lado debe ir para hacer un tiro a gol. Si Footix pierde un partido, quedará suspendido para el partido del próximo día. Footix podrá jugar un día después de la suspensión. Si Footix gana, pasará a la semi-final, y eventualmente a la final.

Voz Virtual de alerta y comunicación
Footix te hablará con su voz virtual diciendo "hello" cuando necesite algo, o silbará cuando se sienta muy feliz.

Sonido: Apagado y Encendido
Presiona el boton A y D al mismo tiempo para que el sonido se apague o se encienda.

Reinicio del Programa
Presiona el botón en la parte de atrás del juego con un objeto con punta, como un lapiz o pluma, cuidando de no presionar demasiado fuerte. Así iniciará un nuevo juego de Virtual Footix.

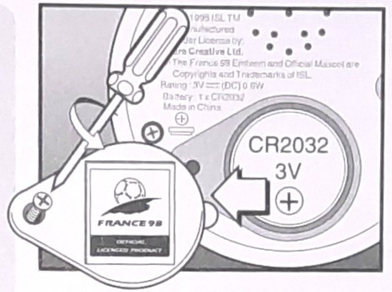

Cambiando la Pila
Para activar tu Virtual Footix, jala la tira plástica de la parte trasera del juego. Reemplaza la pila del juego si la pantalla de cristal líquido no se ve bien. Inserta la nueva pila, APAGANDO EL SONIDO ANTES, y removiendo la tapa de la pila con un desarmador. Inserta una pila 3V "CR2032" en su lugar. (Se incluye una pila de fábrica.)
Algo nuevo ! Prepárate para una rápida recuperación. Tienes 30 segundos para regresar a tu juego sin perder tu etapa y los puntos adquiridos, después de cambiar la pila.

Precauciones
No recomendamos el uso de pilas recargables. Sólo debes usar una pila similar y equivalente a la que trae el Virtual Footix de fábrica. Ten cuidado en insertar la pila en su polaridad correcta. No olvides de remover del juego la pila descargada. Sugerimos que un adulto cambie la pila para mayor seguridad.

Virtual Footix

Instrucción

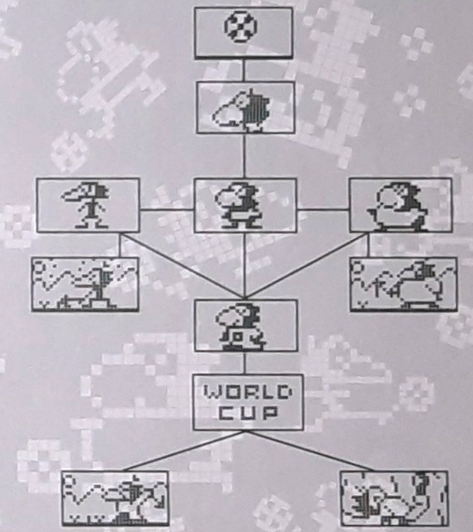

SC-98-6ASP